


# TIP-RESISTANT FURNITURE SAFETY BRACKET

## HARDWARE BAG CONTENT

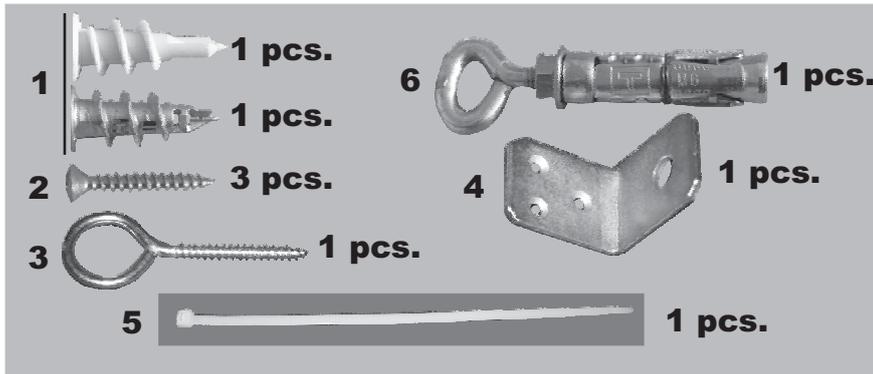

- Designed to help prevent furniture tipping over.
- Also helps prevent furniture tipping over during minor tremors.


## INSTALLATION:

- Fix the metallic bracket (4) on the back of your furniture, below the top, by inserting 3 wood screws (2) into the pre-drilled holes.
- Temporarily move the furniture into its final position. Mark the position of the metallic bracket (4) on the wall.
- Move the furniture away from the wall.
- Drill a pilot hole into the center of the wall mark with a diameter according to the diagram shown below.
- Fix one of the items 1, 3 or 6 (depicted above) into the wall, depending of the wall type, to ensure a strong anchor for your furniture.
- Move the furniture back into its final position, taking care to line up the metallic bracket (4) with the corresponding bracket fixed into the wall.
- Thread the plastic strap (5) through the metallic bracket (4) and through the the wall anchor then tighten until snug. Do not over tighten.




concrete wall  
or brick wall

Ø 1/2" pilot hole

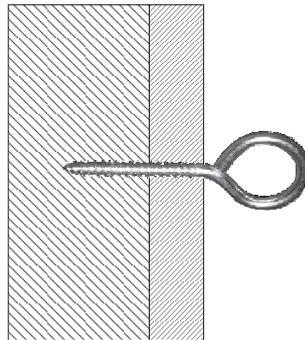

wall stud sheetrock wall

Ø 1/8" pilot hole

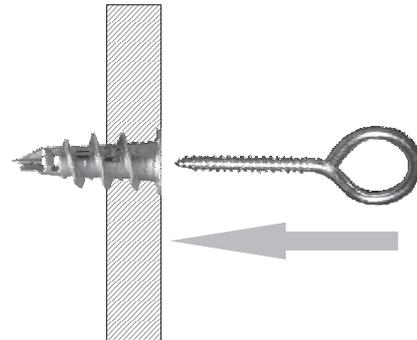

sheetrock wall

Ø 5/16" pilot hole

## IMPORTANT:

- Check to make sure that the wall bracket is firmly screwed into the wall, the furniture bracket is firmly attached to the cabinet and the strap is snug;
- Cable ties can become brittle and snap after some time, so check them frequently.

## CAUTION:

- This product is not to be a substitute for a proper supervision. Always monitor your child's activity when in the nursery.
- Manufacturer assumes no liability for improper installation or excessive loads placed on the screws, brackets or straps.
- Ensure that children do not step or lean against open drawers or shelves.
- Do not open more than one drawer at a time.
- Place any items that may be of interest to a child within easy reach so that they are not enticed to climb for it.

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Be sure to use furniture wall straps to help reduce the risk of tip-over. Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.
- Do not overload drawers.
- Do not allow children to climb or hang on drawers, doors, shelves or any piece of furniture.
- Do not allow children to play on furniture.

This hardware is only a deterrent. Adult supervision is the only proper deterrent to prevent improper use of the units.



## General furniture care tips

Wood, like any natural material is likely to present variations of grain and texture which will result in slight color variations or richness in the finish. These differences make each Silva Furniture item as beautiful and unique as you and your baby are.

To preserve the initial appearance and functionality of your furniture, it is recommended that all furniture items be used in accordance with their intended design.

Special water-based finishes are used to make this furniture safe for your baby. These finishes may be more delicate than those used on adult furniture thus requiring careful maintenance.

Constant rubbing or mechanical interaction with sharp/hard objects such as belt buckles, jeans' zippers or buttons will likely damage the finish on your furniture. When placing or retrieving items onto the furniture, always set them down and pick them up, do not "slide" them. Items placed onto the horizontal surfaces must be moved/ rotated to prevent discoloration in the finish.

Exposure to extreme variations of environmental conditions such as humidity and temperature, can affect the finish quality due to wood sudden expansion or shrinkage. It is recommended that the room temperature be maintained in between 65 and 75 degrees Fahrenheit and a relative humidity of 35 – 40 %. Do not place items which are too hot or too cold directly onto the finished surfaces!

Use caution when using a humidifier or vaporizer. Excessive moisture is harmful to the furniture causing the finish to peel and the wood to warp.

Wipe up spills promptly. If water or other liquids stay in contact with the furniture for a long period of time, they can cause the finish to turn white or discolor. Alcohol or solvent containing substances or materials will permanently damage the finish.

In general, furniture should not be placed in front or too close to air-conditioning outlets, fireplaces, heaters or humidifiers. Direct sunlight and ultraviolet rays will cause colors to fade, affect the luster and smoothness of the finish and in most cases may cause hairline cracks in the finish. White finishes will yellow naturally over time; exposure to direct sunlight will accelerate this natural process. Please note that all wood essences will darken over time along with the natural aging process which is not considered to be a quality defect.

To clean the furniture, use a damp cloth immediately followed by wiping with a dry cloth. Do not allow water to stay in contact with the finish as it will damage the finish.

If you need to put your furniture into storage for any period of time, avoid placing it in damp basements or hot attics. Air flow around and under the furniture should be allowed. Do not place furniture too close to walls, do not stack anything on it and do not cover it entirely.

When using a vinyl changing pad or similar plastic accessories, make sure to use a fabric felt underneath. Certain plastics have ingredients that can react with and damage the finish. It is recommended to rotate the changing pad's position frequently to avoid finish discoloration.